


EXISTING MOTORCYCLE HORN WIRES

TAPE UP GROUND WIRE

CONNECT POSITIVE TO RELAY 86

Please refer to PICTURE # 4 on horn installation instructions to see relay mounted under seat.

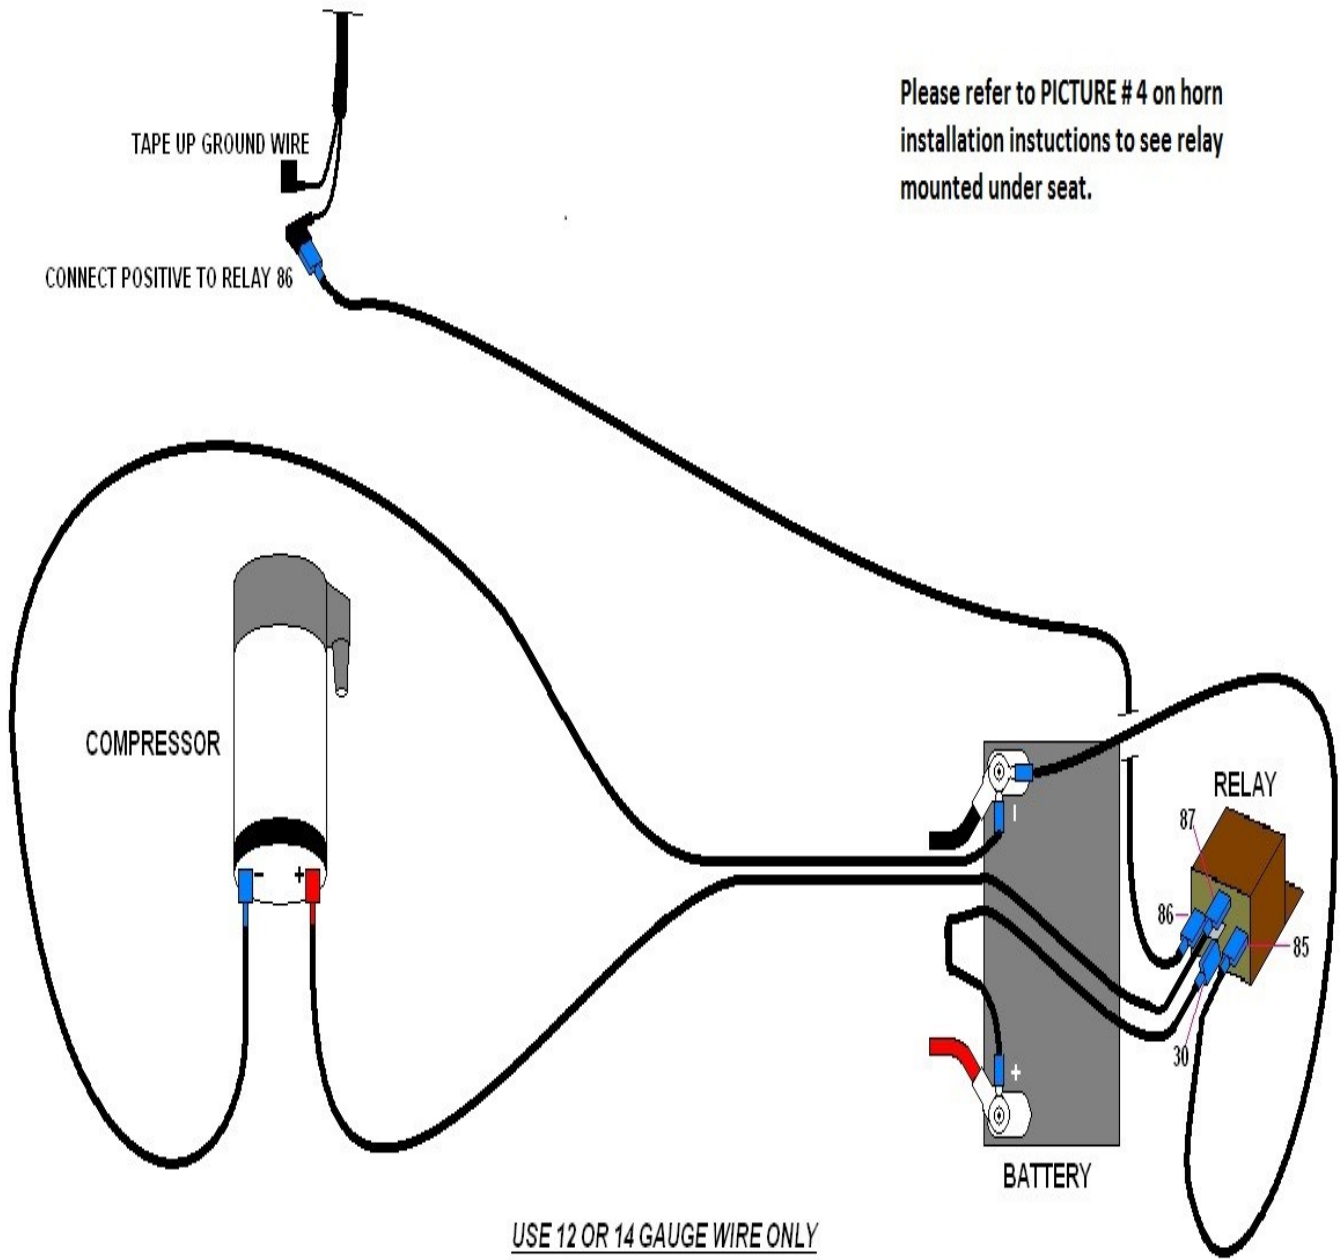

USE 12 OR 14 GAUGE WIRE ONLY

Automotive wire only, not speaker wire, telephone cord, or any wire meant for household use.